

⚠ Caution

1. This is precision product, therefore it should be installed by expert of the lock. If install by personally, please be careful and should check the installation manual before install the product.
2. The strike guider is served to install correctly, please remove out the strike guider after installation.
3. Please check door thickness and door handing before installation.
This product can be installed with door thickness 40~50mm


🕒 How to install

⚠ Caution : Firstly, check the door can open and close smoothly or not.

1. After fold 90 angle which the fold line at the installation template and it should be closely to the door and then marked to install.
2. Build at marked point with given specification on the installation template.
(In case of dismantle existing mechanical auxiliary lock, just use center hole on the mounting plate to adjust position and install the product.)
3. Front Ass'y make closely at the door from outside, and use fasten **screw②** to fix the mounting plate and front ass'y (careful the direction on the mounting plate).
For more strong fasten the mounting plate, use fasten **screw①** to fix the mounting plate.

※ Screw Specification


Screw①	Screw②	Screw③
T4X19 10pcs	M5X30 2pcs	M5X29 4pcs

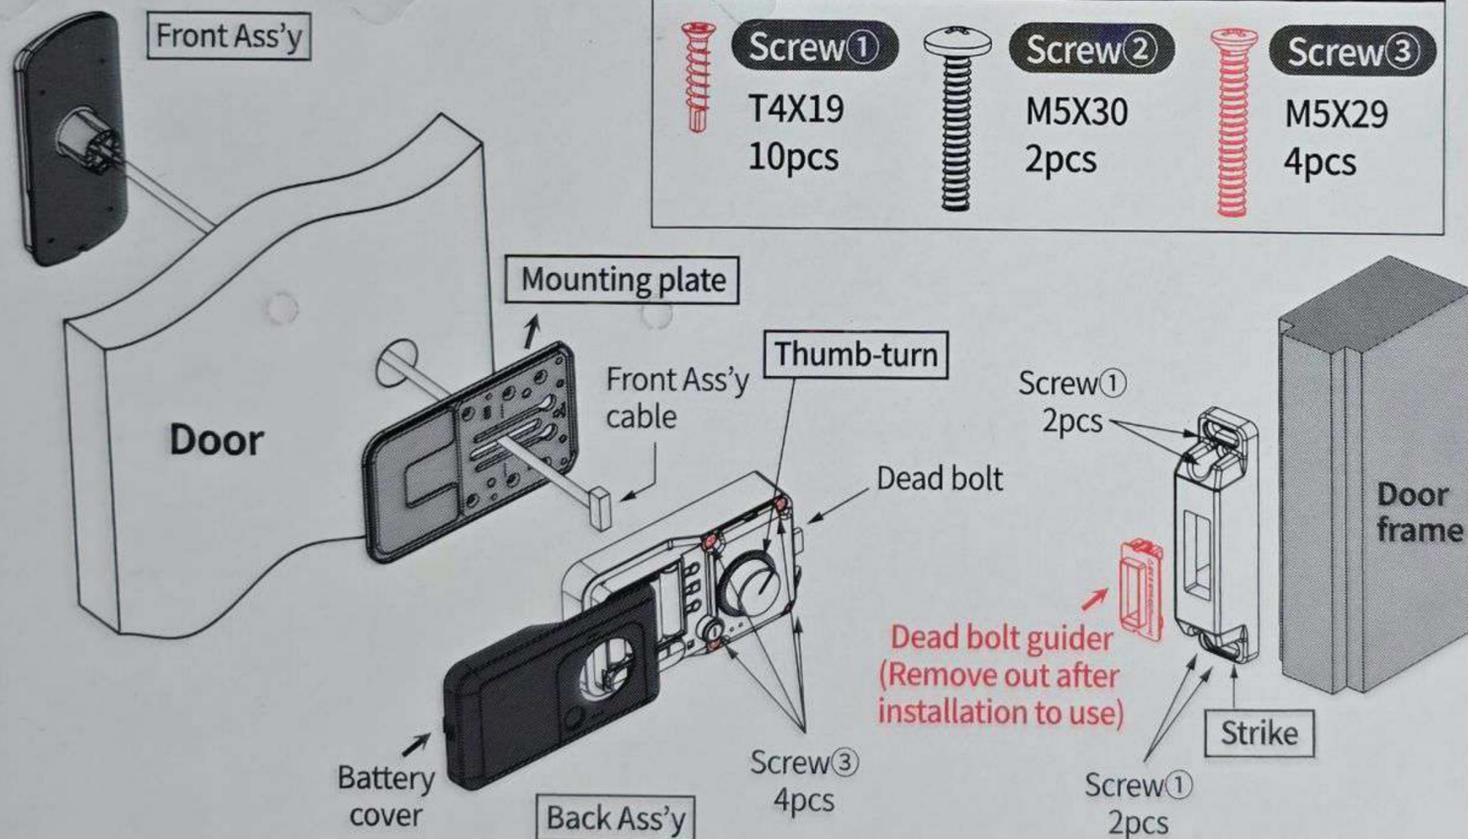

4. Front ass'y cable insert to back ass'y connector and the fix at the mounting plate by using fasten **screw③**.
5. Fix the strike as follow deadbolt direction with fasten **screw①** and make certain distance strike and deadbolt.
6. Check the door open and close property or not by open/close button.
7. Insert exactly the battery depending on direction(⊖, ⊕).
8. Before used, reading the user`s manual to understand how to use this product and then try to register secret code to use.

Tip


Ease of installation a mounting plate

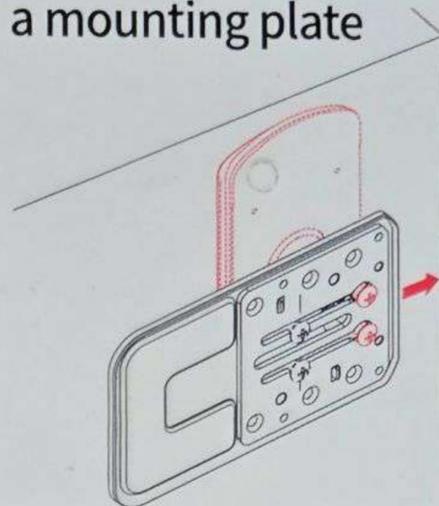

1. Tighten the screws(M5*30) to the front Ass'y by 10mm first (based on 40mm of door thickness)
2. Insert the front ass'y into the mounting hole, and then slide the screw head into the large opening of the mounting plate to allow the front ass'y to be installed without falling off.
3. Tighten the screws to the main body by 10mm first (based on 40mm of door thickness)

Mounting plate

※ Attach the picture to view

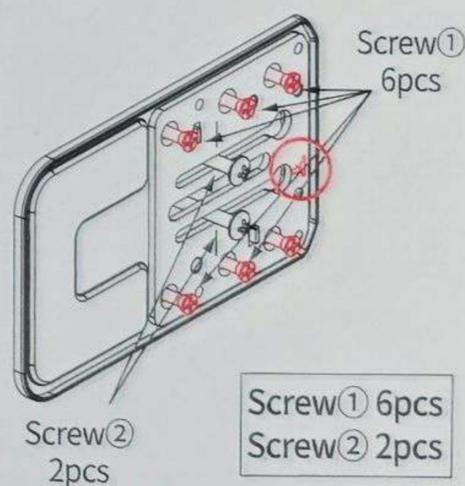

Strike guider

※ Use the strike guider if strike height adjustment is required.

